


# MUDGUARD INSTALLATION GUIDE

## INCLUDED PARTS

Front mudguard | Rear mudguard | Front struts | Rear struts | 4 × M5 bolts | M6 × 19 mm bolt | 2 × Open eye bolts  
2 × Locking nuts | 3 × 12 mm washers | 4 × 10 mm washers | 2 × 14.9 mm washers | 4 × Struts clips | Cover plug


1

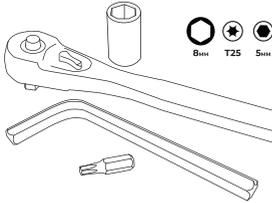

## PREPARE TOOLS REQUIRED:

- 8 mm socket wrench
- T25 Torx key
- 5 mm Allen key

2

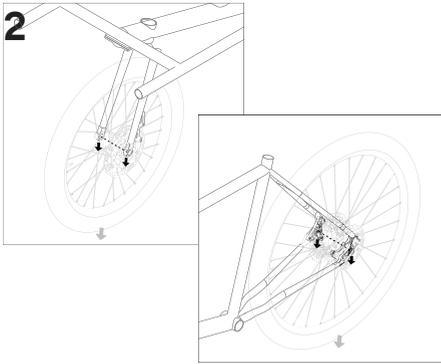


## REMOVE WHEELS AND EXISTING ACCESSORIES:

- **Unscrew** the thru-axle and remove both the front and rear wheels.
- **Remove** any previously installed mudguards or wheel-mounted accessories.

NB - Help to remove wheels

Follow step 4 [here](#).

3

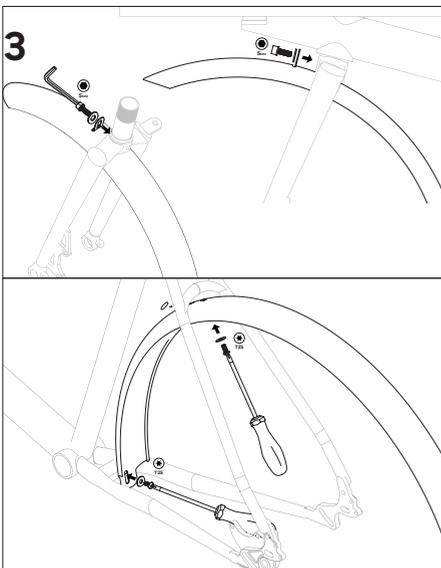


## ATTACH MUDGUARDS TO FORK AND FRAME:

- **Position** the front mudguard on the fork and the rear mudguard on the frame.
- **Use a 12 mm washer** at the mounting point.


NB

Tighten the rear mudguard securely.  
Use the cover plug to cover the hole not used.

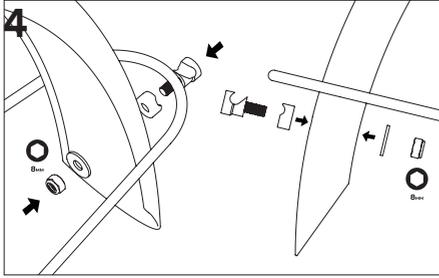


## ASSEMBLE MUDGUARDS AND STRUTS:

- Assemble the struts to the mudguards using the open eye bolts, a 14.9 mm washer and locking nuts.
- Use the alignment markings to ensure correct left/right positioning.

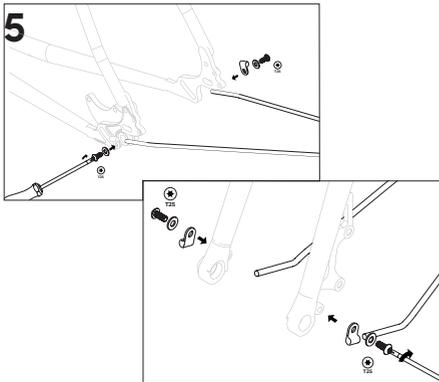

## ATTACH STRUTS TO DROPOUTS:

- Attach the struts to the tapped eyelets at the dropouts using the strut clips.
- Use a 12 mm washer at each dropout mounting point. Do not fully tighten yet.

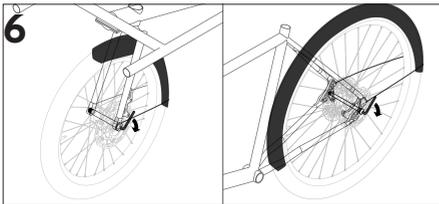

## REINSTALL WHEELS:

- Reinstall both front and rear wheels. Tighten the thru-axes according to the manufacturer's torque specifications.

NB - Help to install wheels

Follow steps 1,2,3 [here](#).

## FINAL ADJUSTMENT AND ALIGNMENT:

- Adjust the struts and the front mudguard hanger.

NB

- Ensure even tire clearance
- Ensure the mudguards are centered
- Ensure no contact during wheel rotation

- Once aligned, fully tighten all remaining hardware.